

weminder

Gentle reminders. Familiar voice.



Features

- Smart reminders
- One button control
- Program by smartphone app
- Light & portable
- Long battery life



Smart reminders



One Button Control




Programmed by APP



Light and Portable



Cloud Storage

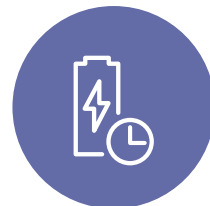

Long Battery Life

Package Includes


- 1 x weminder
- 1 x CR123A battery
- 1 x Lanyard



weminder




CR123A battery

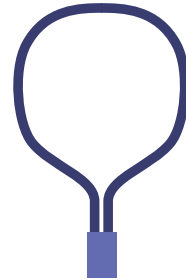

Lanyard

weminder unit

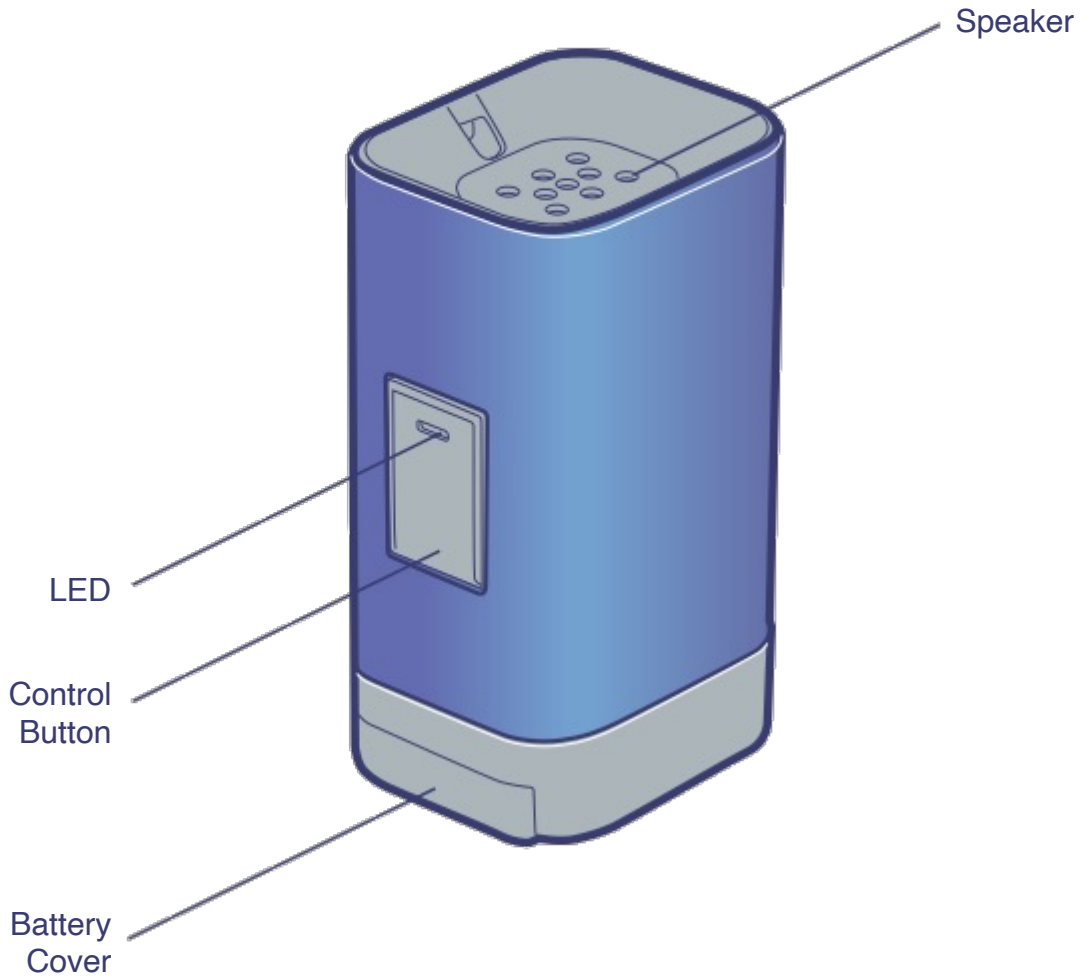

First time use

1. Install **weminder** APP: Download and install the weminder APP in App Store (iOS) or Google Play (Android) on your smart phone.



Weminder APP

2. Create and schedule voice reminders in your weminder APP.

iOS




<https://apps.apple.com/hk/app/weminder-audio-reminders/id1541585653>

Android



<https://play.google.com/store/apps/details?id=com.jlworld.weminder>

Sync your voice reminders to the weminder device

 
1. Make sure the weminder is nearby your smartphone.
2. Power ON the device: Open the battery cover, insert the battery into the battery compartment and close the battery cover.
3. The weminder device will enter pairing mode directly.
4. Tap Setting icon  to enter the setting menu. Then tap “Pair new Weminder device” to pair your weminder device with the weminder APP.
5. Tap “Sync data” to synchronize your voice reminders to your weminder device.

LED indication in various mode:

- Pairing mode: Green and red light blinking alternatively.
- Device connected: Green light ON continuously.
- Syncing data: Green light blinking.

Tap “Close” after synchronization is done.

*The synchronization process may need more than one minutes for multiple reminders.

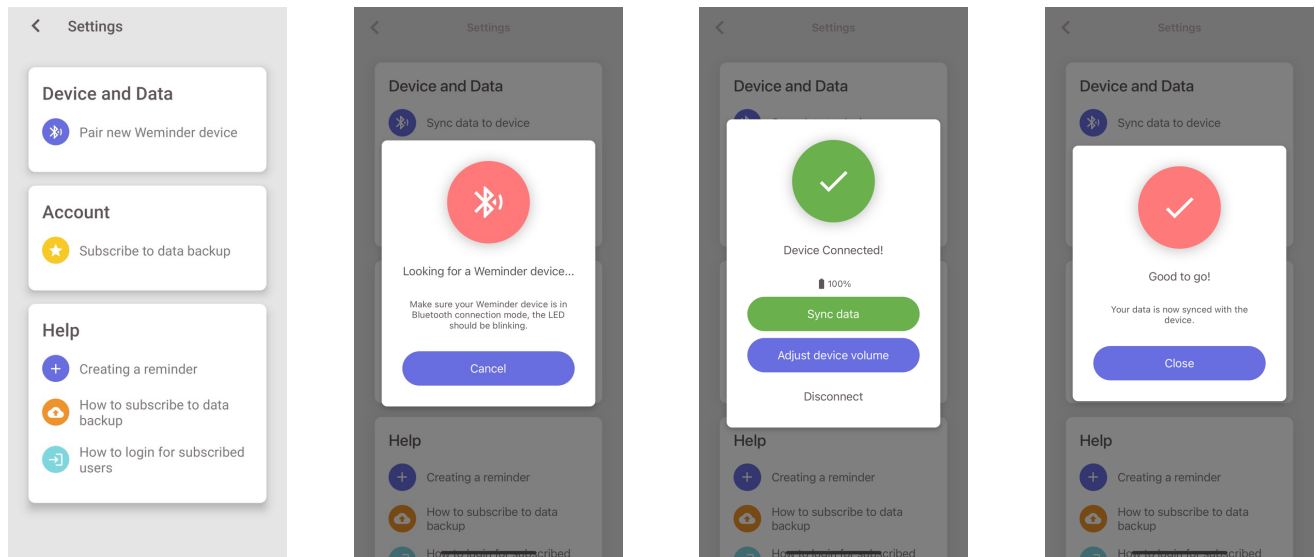

Firmware update

- You may be asked to update the firmware if there is a newer firmware version for your weminder device. Tap “Update firmware” to update the firmware.
- The update process may need more than one minute to complete.
- Do not stop the update process on weminder APP, or remove the weminder device battery until the update process has completed.






Device Connected!

There is an update for your device.
Please update the firmware by tapping
below.

Update firmware

Adjust device volume


Disconnect

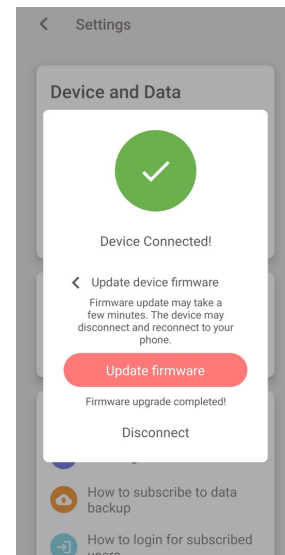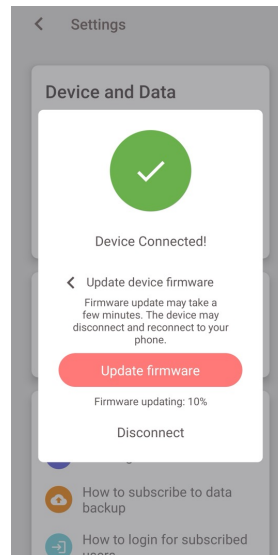
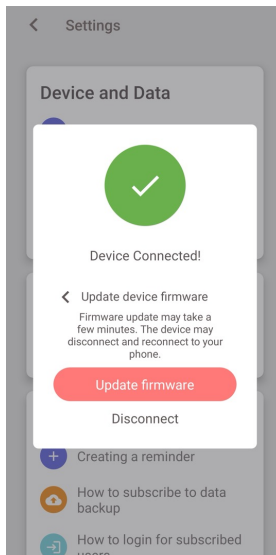


Operation

- The weminder will ring at scheduled time. Just simply press the button to hear the voice messages.
 - You can press the button again to hear the last voice message.
 - If you miss the scheduled time, weminder will ring every one minute (first 10 minutes) or five minutes (after 10 minutes) until button press.
 - The voice message will expire after 30 minutes of the scheduled time.
2. Enter the Sync mode: Press and hold the button of your weminder device for 3 seconds to enter the sync sequence. You will hear the beep sound after entering the sync sequence.
 3. Tap “Sync data” to synchronize your voice reminders to your weminder device.
 4. Tap “Close” after synchronization is done.

Adding new voice reminders to your weminder unit

1. In weminder APP, tap Sync icon  to pair your weminder device with the weminder APP.

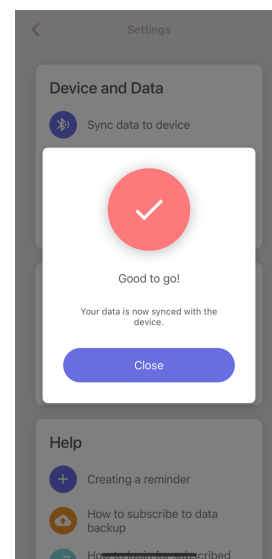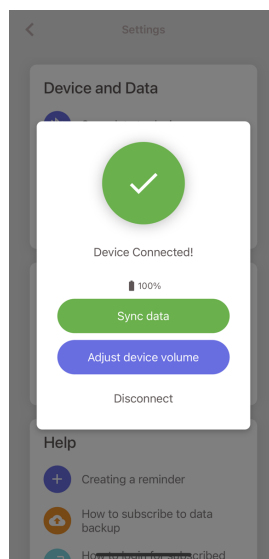

Low battery warning

A red LED will blink slowly (every 15 seconds) if the battery voltage level is low. Replace with a new battery and sync the weminder unit to your smartphone again.

Product specification


Mechanical specification

Dimensions: 52 x 25 x 30mm
Casing material: Aluminum alloy,
ABS plastic

Electrical specification

Operating Voltage: 3V
Standby Current: 1mA
Operating Current: 500mA
Sound Pressure Level
(at 10cm, 1W): 97dB
Battery: CR123A

Battery installation

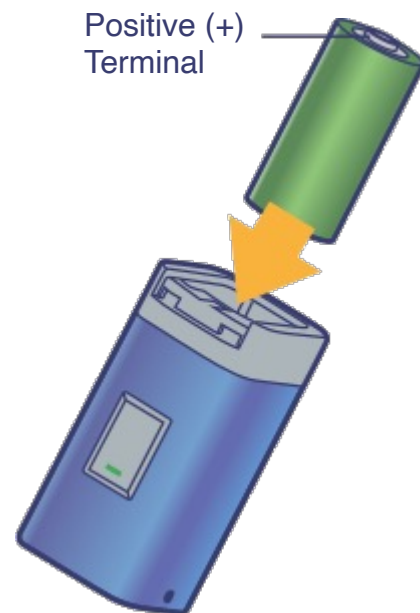

Wireless specification

Bluetooth 5 BLE
2.4GHz Transceiver
Receiver Sensitivity:
-96 dBm at 1Mbps Data Rate

Bluetooth module certification:

- FCC ID: X8WBT832
- IC ID: 4100A-BT832
- CE: Certified
- TELEC: 201-180944
- Australia/New Zealand: Certified
- QDID: 97989

Battery safety

- Do not short or charge the battery.
- Do not over-discharge, crush, incinerate or disassemble the battery.
- Do not apply heat to the battery.
- Replace the battery when low battery warning is ON.
- Dispose of depleted battery safely.

Safety precautions

- Do not swallow the battery cover which may cause choking.
- Do not let the lanyard get entangled while in use, which may cause suffocation.

Disposal and Recycling Information



The symbol on the product and packaging is in accordance to European Union Waste Electrical and Electronic Equipment (WEEE) Directive. When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of waste will help conserve natural resources and help protect the environment.

European Compliance Statement



JL World Corporation Limited hereby declares that this device is in compliance with the essential requirements and other relevant provisions of the R&TTE Directive.

FCC Compliance Statement



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this product not authorized by JL World could void the electromagnetic compatibility (EMC) and wireless compliance and negate your authority to operate the product.

©2021 JL World Corporation Limited. All rights reserved.